ROAD & MINING Supplies

Dingo Eyestm

INSTALLATION GUIDE

INSTALLATION INSTRUCTIONS

- Locate Anchor Stake (1) in desired location. (Ensure threaded portion is not damaged.)
- Screw Locknut (2) on threaded portion of Anchor Stake (1) to full depth.
- Bind together ends of exposed wires (3) protruding from bottom of Light (7) and secure with Screw-on Protector (4). See Note A.
- Screw Locknut (5) on threaded portion (6) of light (7) to full depth.
- Screw Light (7) into the Reflective Tape (8) end of Pole (9).
- Align similar colour Diffuser (10) with Reflective Tape (8) and lock Light (7) in place by tightening Locknut (5) against end of Pole (9).
- Screw assembled Pole (9) with Light (7) attached onto Anchor Stake (1).
- Align Pole (9) so as the colour Diffusers (10) and Reflective Tape (8) point in the required direction and lock in place by tightening Locknut (2) against end of Pole (9). See Note B.

Note A:

Batteries will not charge if exposed wires (3) are not connected.

Note B:

For roads RED Lights should be on the left and WHITE Lights on the right for the direction of travel.

MAINTENANCE INSTRUCTIONS

- Clean Lights by wiping with moist soft cloth.
- To access the batteries remove the four screws on the underside of the light. Caution should be taken removing any parts. DO NOT remove the top Lens (11) as this will damage the fixing lugs.

